



DESIGN CB	DRAWN BY CB	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED CE	APPROVED #	DRAWING NO. DSI 9363	REV. A SHEET 1 OF 1
DATE 07.01.19		TITLE SHIM KIT	SCALE NTS
A	07.01.19	NEW ISSUE	

DART SERVICE INSTRUCTION


TO AMEND INSTALLATION INSTRUCTIONS IIN-D412-694 REV. B AND INSTRUCTIONS FOR CONTINUED
AIRWORTHINESS ICA-D412-694 REV. 1
REF. CANADIAN STC: SH05-10
REF. FAA STC: SR02086NY

Dart has created the optional DSI-9363-011 Shim Kit that may be installed between the D3121-041/-043/-044, D3183-041/-042 and D3137-041 Bracket Assemblies and the Spacedoor™ to improve grip between the Bracket Assemblies and the Spacedoor™. This kit may be installed as a replacement for or in addition to the AN960JD10 Washers and/or the D3090-1/-3 Shims used to shim the Bracket Assemblies as described in the Installation Instructions.

The serrated faces of the D3238-21/-23/-25 Plates should be installed against the serrated faces of the Bracket Assemblies to ensure positive locking as shown in **Section A-A**. The D3238-31/-33/-35 Plates, the AN960JD10 Washers and the D3090-1/-3 Shims can be installed as required between the D3238-21/-23/-25 Plates and the Spacedoor™ to achieve good door alignment.

The Table and Figure below show the location, the quantity and the part number of each Plate and the corresponding Bracket Assemblies on the Spacedoor™.

Qty	Part Number	Description	Used to Shim Bracket Assembly P/Ns	Location
X	DSI-9363-011	SHIM KIT		
6	D3238-21	PLATE	D3121-041	1
12	D3238-31	PLATE	D3121-041	1
2	D3238-23	PLATE	D3121-043/-044	2
4	D3238-33	PLATE	D3121-043/-044	2
4	D3238-25	PLATE	D3183-041/-042, D3137-041	3, 4
8	D3238-35	PLATE	D3183-041/-042, D3137-041	3, 4

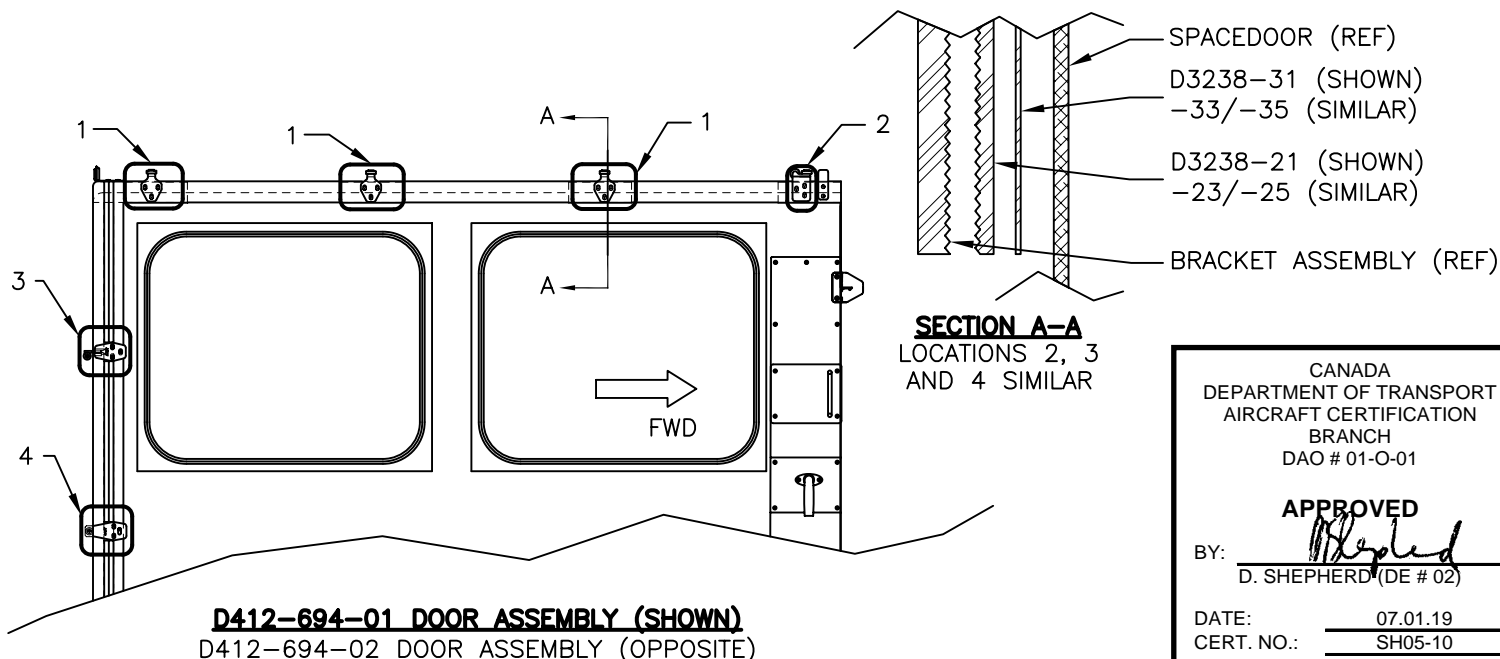

Copyright © 2007 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.